



# Step by step installation guide for Identix miniPad-rPad drivers on Windows 8


- 1) Connect the miniPad / rPad device on the Windows Computer
- 2) Open Windows Device Manager. The following window will appear.

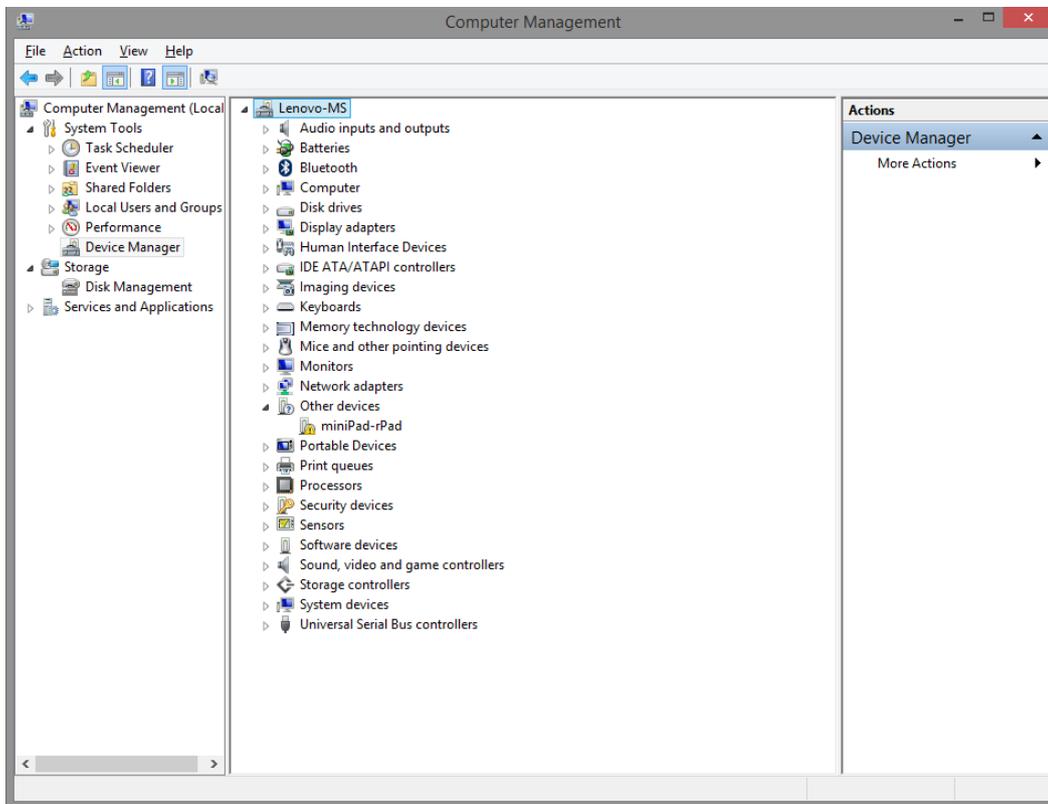


- 3) Right Click on the “miniPad – rPad” icon and select “Update Driver Software”. The following screen will appear:

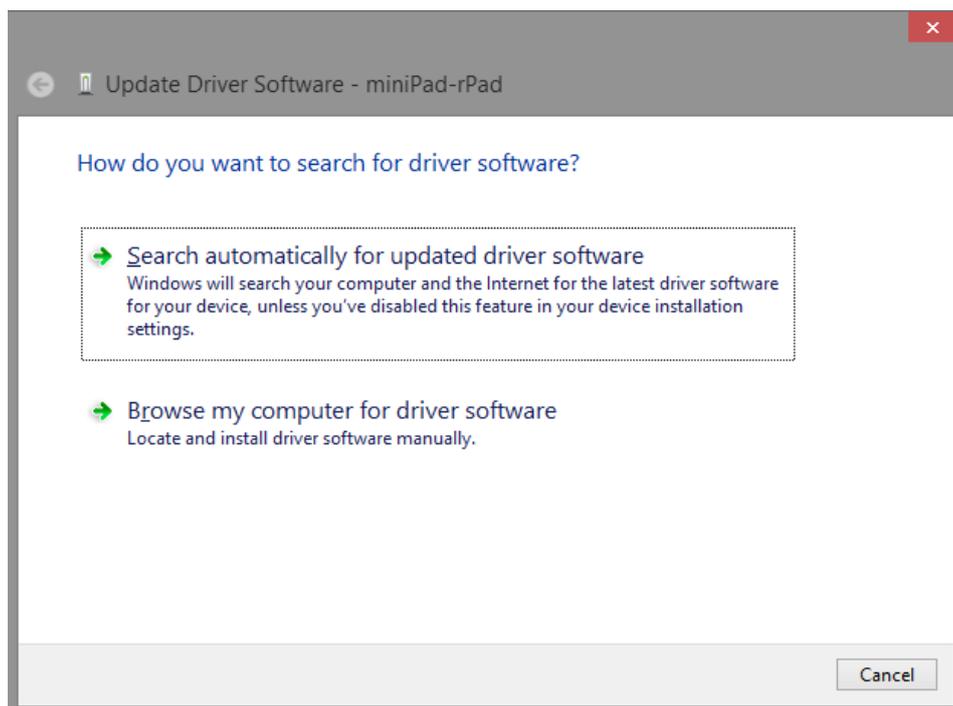


4) Select "Browse my Computer for Driver Software". The following window will show:

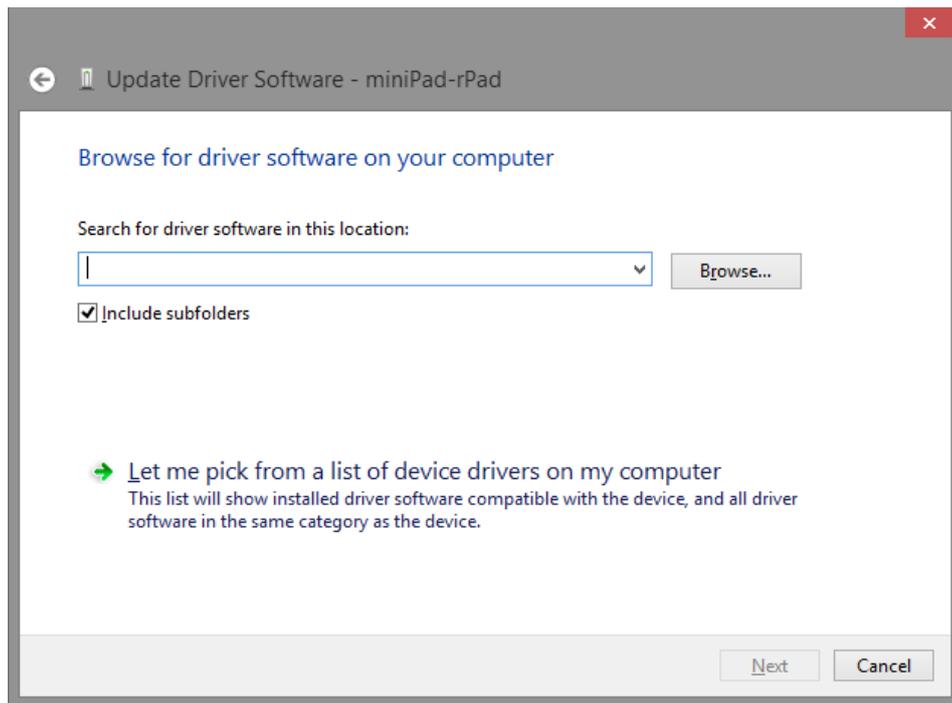


5) Select "Let me pick from a list of device drivers on my computer". The following screen will show.

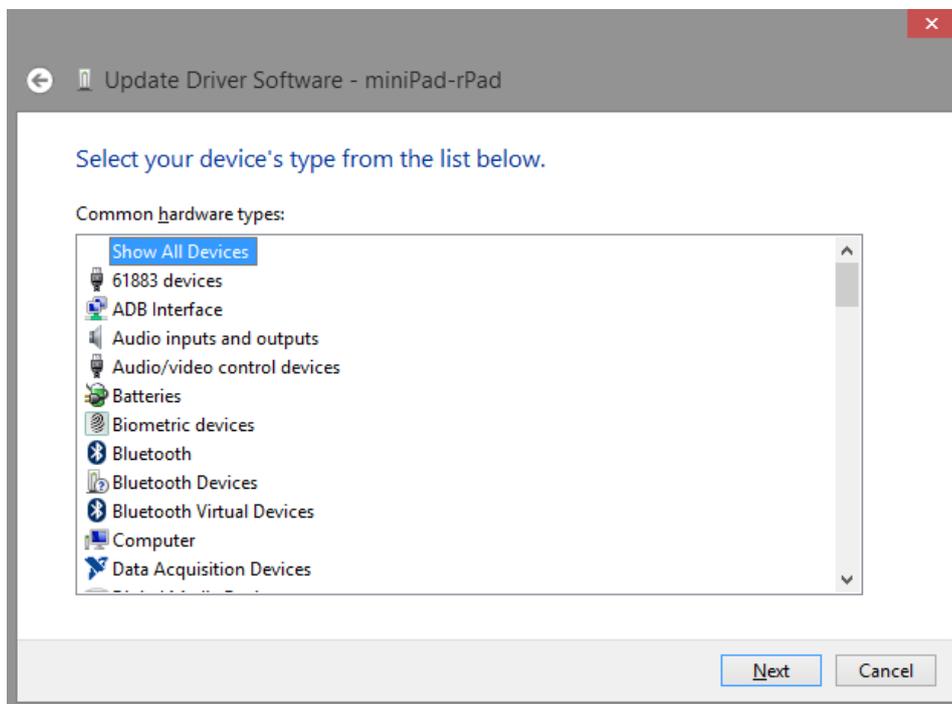

6) Click “Next” and the “Have Disk”. The following screen will show.

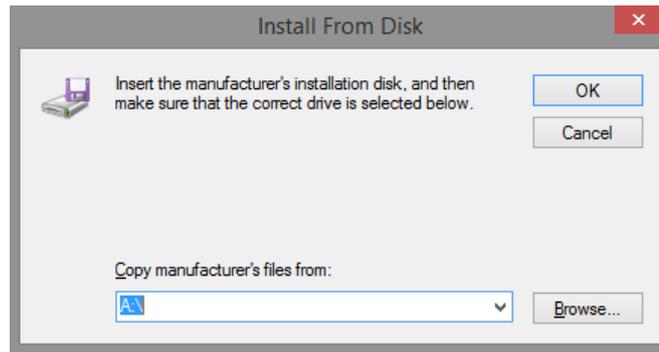


7) Select “Browse” and then select the “miniPad-rPad.inf” file provided by Identix.

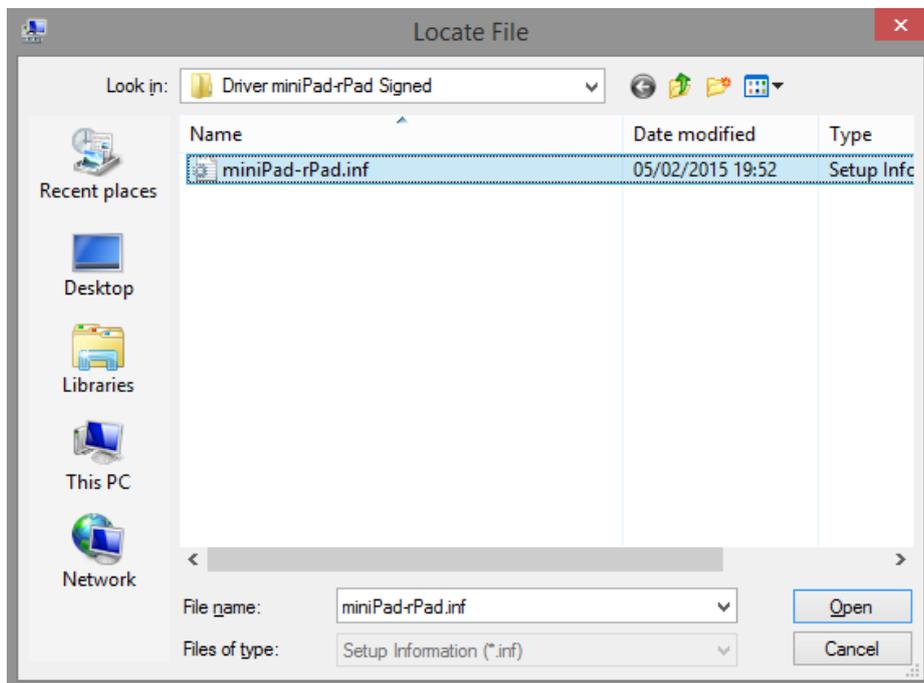


8) Select “Open” and then hit “Ok”.



9) After hitting Ok, the following screen appears. Click “Next”.

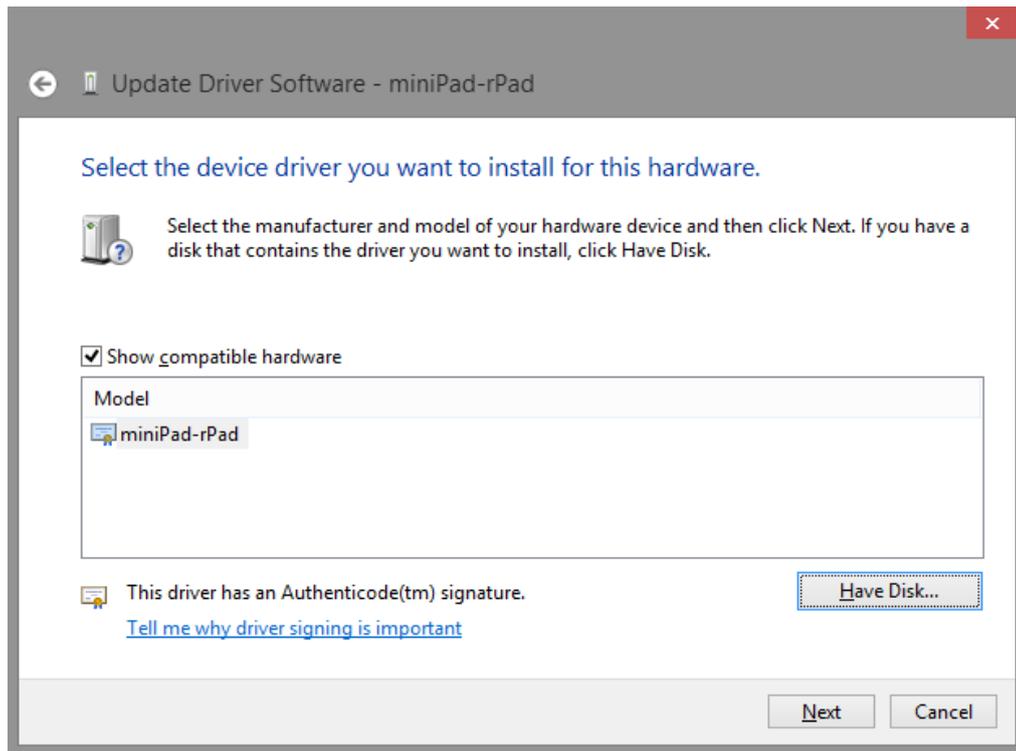

10) Windows will install the “miniPad-rPad” driver and the following screen will show.

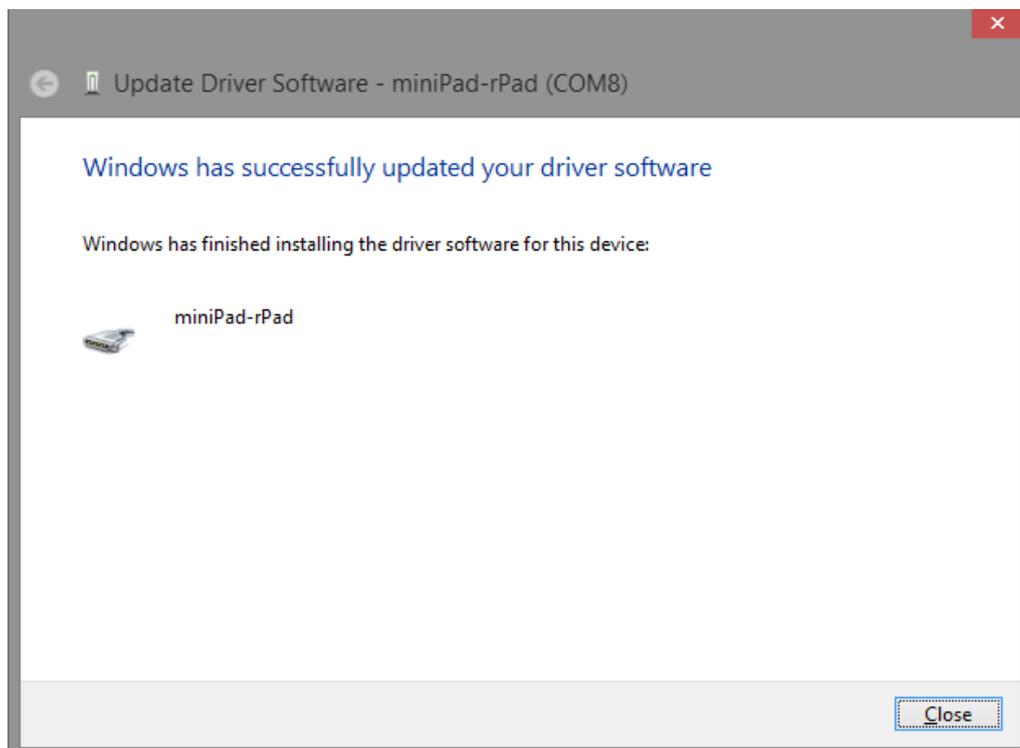

11) Now the miniPad-rPad device will appear mapped as a serial communication device (COM port) on Windows device manager.

