



Steps to run the RAW mode on Mac:

- 1 – Download and install CoolTerm
- 2 – Configure the miniPad to operate on RAW mode
- 3 – Open the CoolTerm click in the Options button:

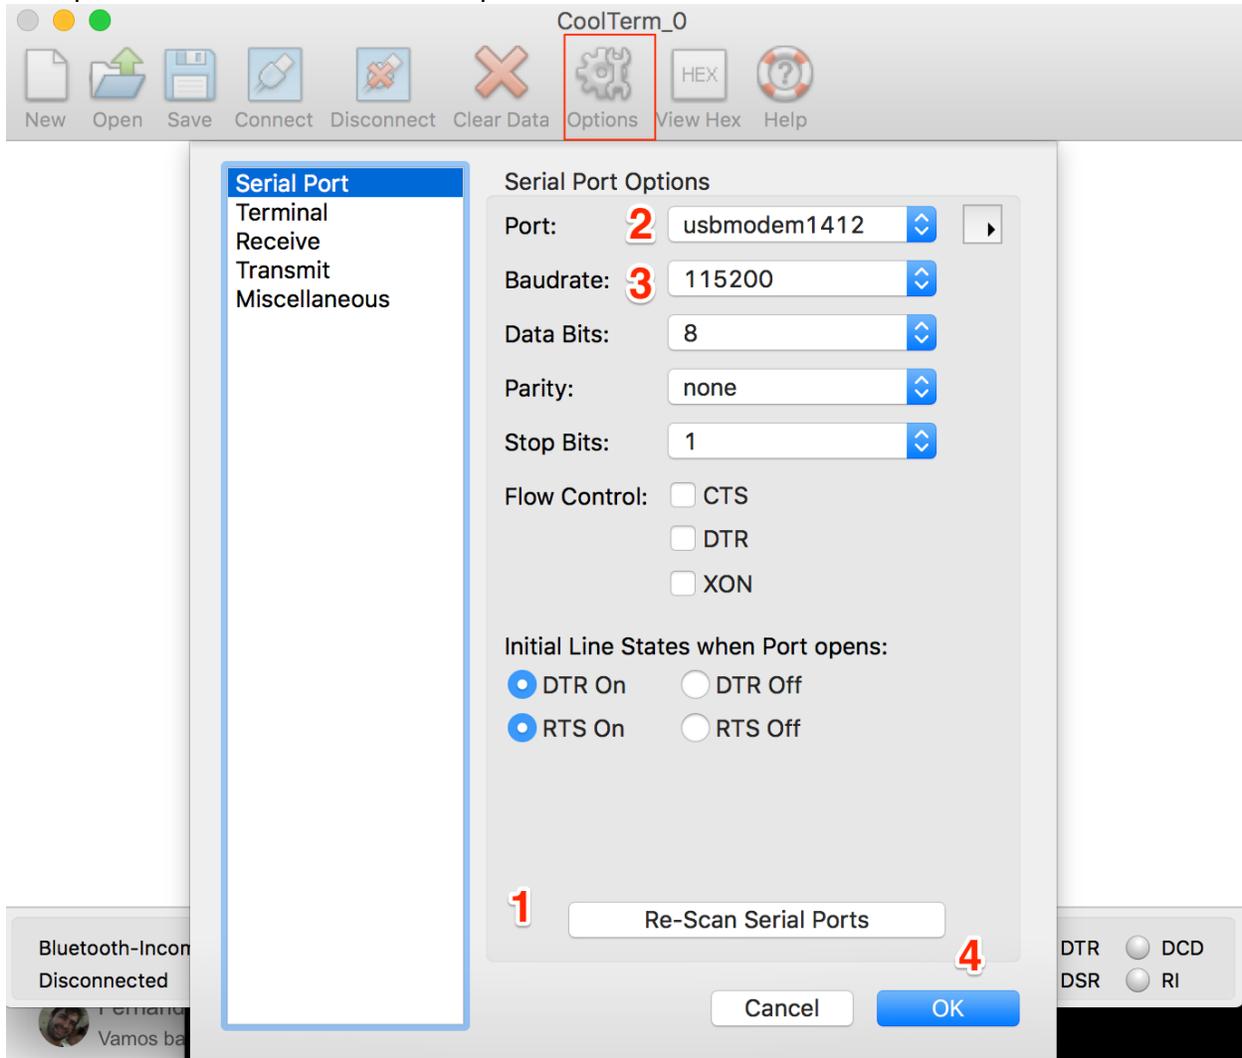

In the options screen:

- 3.1 – Click Re-scan Serial Ports to make sure that Mac OS has detected the USB device
 - 3.2 – Select the USB device for miniPad
 - 3.3 – Set the Baudrate to 115200
 - 3.4 – Click OK
- 4 – Click in the Connect button:

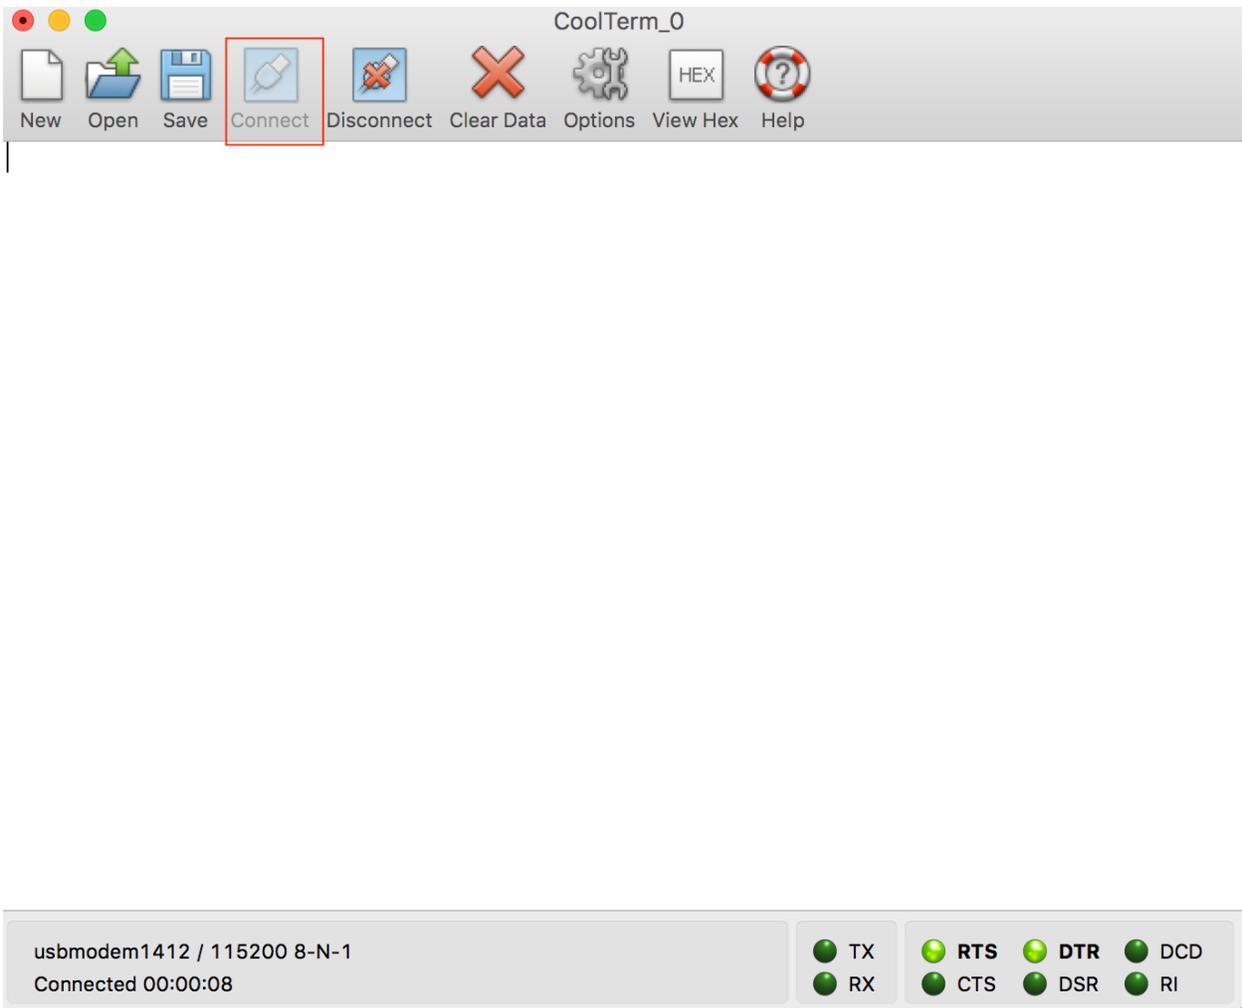

Press 1 to start inventory and 0 to stop it:

CoolTerm_0

New Open Save Connect Disconnect Clear Data Options View Hex Help

```
Inventory started
3075e1a684a1a94000003d23
Inventory stopped
Inventory stopped
|
```

usbmodem1412 / 115200 8-N-1
Connected 00:01:43

TX RTS DTR DCD
 RX CTS DSR RI